

Read these instructions completely before using your Doggie Don't training device

Get to know your Doggie Don't training device



Training Suggestions:

- Pick your command(s), make sure it is something that you can remember, make it specific to ONE behavior.
- If your dog jumps up on people, if your dog is barking at people or at other dogs while you are out on a walk. When the unwanted behavior presents, first say "OFF" or "HUSH" or "NO BARKING". If your dog continues the behavior, then trigger your Doggie Don't ONCE and say your command again.
- Once your dog stops the behavior, reward him with your words. **Never raise your voice.** You want your

Dog to react to the sound and vibration from your device and not be startled by your voice. This is the key component for your Dog's behavior to change.

- You must **always be calm, loving and consistent** with your command, voice and tone of voice. If you follow these steps your dog will quickly stop the unwanted behavior.

[Training note: You can muffle the sound into your hand or clothing if your dog is sound sensitive.]

Read these instructions completely before using your Doggie Don't training device



DO's and DON'Ts of using your Doggie Don't training device

- **DO** use it consistently if you want to correct the behavior.
- **DO** pick a command and use the same command consistently.
- **DO** keep your voice calm when you say your command.
- **DO** trigger your Doggie Don't Device ONE time for each correction.
- **DO** use CR2 lithium non-rechargeable batteries. You will get approximately 500 discharges before you will need to replace your battery with a non-rechargeable lithium battery.
- **DON'T** put the device up to your pet's ears or to your ears. Keep the device at arms length from your or your pet's ears.
- **DON'T** use rechargeable batteries.
- **DON'T** get wet or drop device - use wrist cord - treat your device like you would your camera or phone.
- **DON'T** let children play with this device. ***This is not a toy. This is a training device.***

User Safety Information:

- Keep away from flammable material.
- Never store near hot objects, in direct sunlight, or at a temperature above 140° F.
- This device is not water-resistant. Keep away from water, rain, etc. If any liquid or foreign object has entered the unit, do not use, consult your authorized dealer.
- Do not touch the internal parts. These are high tension circuits that may cause severe electric shock.
- Do not open, disassemble or modify this device, as it may cause damage to the unit. For internal repairs, consult your authorized dealer.
- Do not discharge the unit into the air for more than 1 second at a time. Continuous firing for a longer duration can damage unit and will void the warranty.